

## EM8300CU CONTINUITY TESTER FOR ESD WRIST-STRAP, MAT AND EARTH





**SKU: 131974B** 



## **EM8300CU CONSTANT MONITOR**

**EM8300CU Constant Monitor** - Capacitive tester that continuously check if ESD safe wrist-strap and mat are correctly connected to earth. If one of this elements (wrist-strap, mat, grounding) fails, the operator is alerted by an acoustic alarm and a red LED indicator.

The tester works with a standard wrist-strap and cord and has a body mass adjustment for individual user set-up.

## **Specifications**

- Model with inverted signs, to be mounted under the bench
- Dimensions: 125 x 50 x 20 mm
- Connections:

ESD mat connection mode (banana/banana cable included): **banana** socket, Ø 4 mm ESD wrist strap connection mode: **banana** socket, Ø 4 mm

• Functions:

Constant monitoring of the earth to ground connection Constant monitoring of the mat to earth connection



Constant monitoring of the wrist-strap connection.